















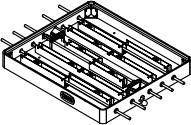





































## G74100-1 PARTS LIST

1		x1	2		x4	3		x1	4		x1
	Mainframe			Leg Leveler			Bottom Pedestal			Top Pedestal	
5		x4	6		x1	7		x2	8		x1
	Leg			Dome			Hockey Goal			Playfield	
9		x16	10		x4	11		x2	12		x2
	3/16"x15mm Washer			5/16"x19mm Washer			Playfield Block			Playfield End	
13		x4	14		x1	15		x1	16		x8
	Player with short stick-Yellow			Goalie-Yellow			Player with long stick-Yellow			M5x45mm Bolt	
17		x4	18		x1	19		x1	20		x12
	Player with short stick-Red			Goalie-Red			Player with long stick-Red			M3x8mm Screw	
21		x28	22		x2	23		x8	24		x4
	M3x15mm Screw			Knob			5/16"x2-1/2" Bolt			5/16"x1" Bolt	
25		x20	26		x16	27		x1	28		x4
	4x45mm Screw			1/4"x19mm Washer			Mounting Bracket			Trim strip - A	
29		x4	30		x4	31		x16	32		x16
	AlumTrim strip - B			Leg Panel			1/4" Barrel Nut			1/4"x1-3/4" Bolt	

**G74100-1 PARTS LIST**

<b>33</b>  x8 3/16" Nut	<b>34</b>  x1 Allen Key	<b>35</b>  x1 Wrench	<b>36</b>  x10 Handle
<b>37</b>  x2 Round Puck	<b>38</b>  x1 BATTERY BOX	<b>39</b>  x8 5/16"x22mm Washer	<b>40</b>  x4 M5 Nut
<b>41</b>  x3 4x15mm Screw			



**G74100-1 PRE-INSTALLED PARTS LIST**

<b>P1</b>  x1 Scorer Display Wire - Short	<b>P2</b>  x1 Scorer Display Wire - Long	<b>P3</b>  x1 Control Box	<b>P4</b>  x2 Scorer Display
<b>P5</b>  x2 Goalie Control Ball	<b>P6</b>  x4 Apron corner	<b>P7</b>  x2 Link Piece	<b>P8</b>  x10 Puck Launcher Spring
<b>P9</b>  x10 Rod Track End - A	<b>P10</b>  x10 Rod Track End - B	<b>P11</b>  x10 Gear Box	

**ASSEMBLY INSTRUCTIONS:**

1. Find a clean, level place to begin the assembly of your Dome Hockey Table. We recommend that two adults work together to assemble this Score Table Game.
2. Remove all the parts from the box and verify that you have all of the listed parts as shown on the Parts list pages. Carefully cut or tear the four corners of the box so that the bottom of the box can be used as your work surface.


5		X 4
9		X 16
16		X 8
27		X 1
31		X 16
33		X 8

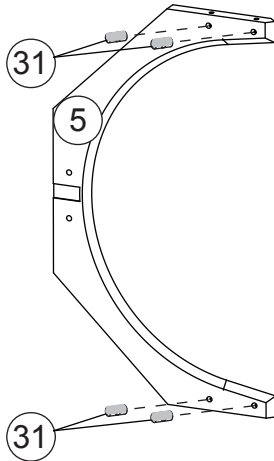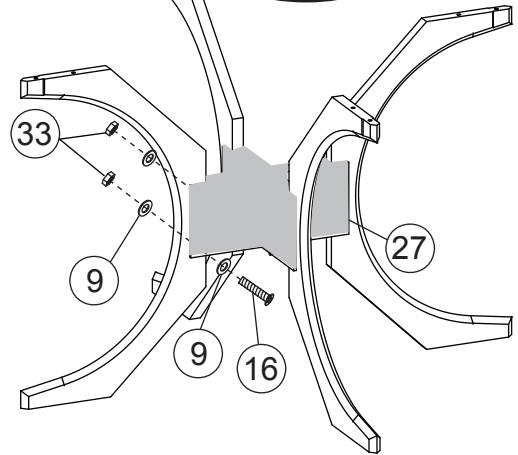**FIG. 1****FIG. 1A****FIG. 1B****FIG. 1**

3. Place the Barrel Nuts (#31) into the Legs (#5).  
See **FIG. 1A**.

4. Attach the Legs (#5) to the Mounting Bracket (#27) using two Bolts (#16), four Washers (#9) and two Nuts (#33).  
per Leg. See **FIG. 1B**.


2		X 4
3		X 1
4		X 1
26		X 16
32		X 16

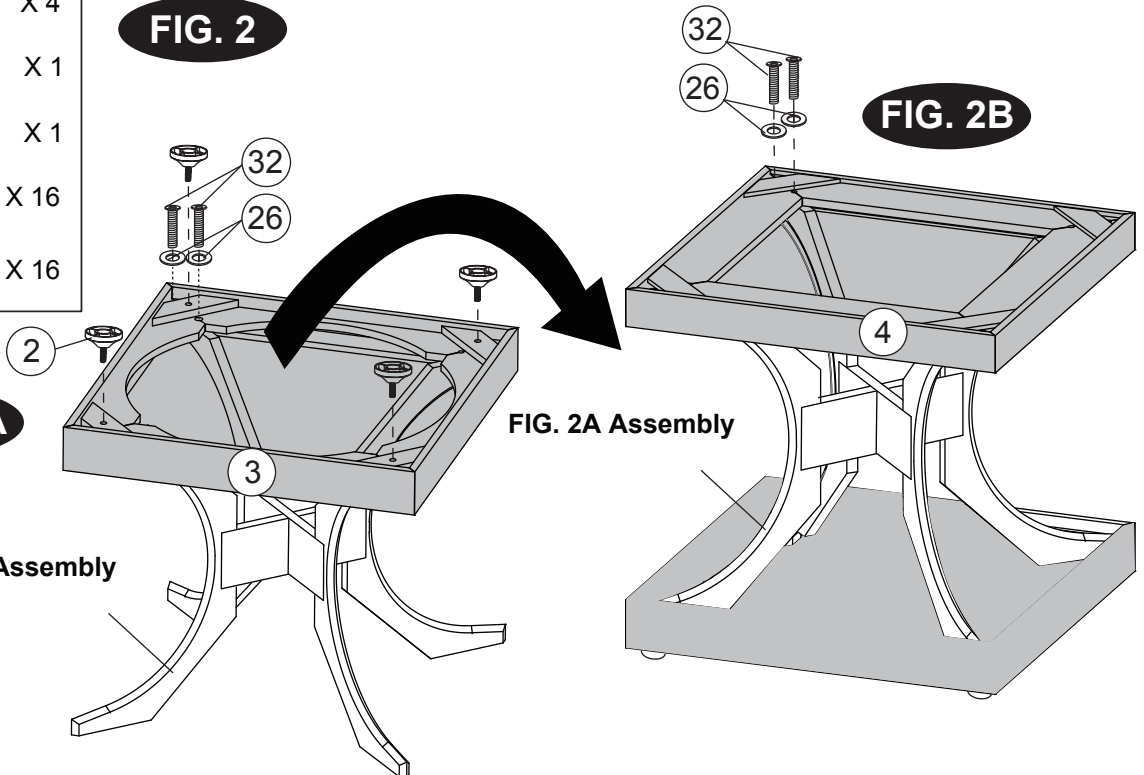**FIG. 2****FIG. 2B****FIG. 2A****FIG. 1B Assembly****FIG. 2A Assembly****FIG. 2**


5. Attach the Bottom Pedestal (#3) to the FIG. 1B Assembly using eight Bolts (#32) and eight Washers (#26). See **FIG. 2A**.

6. Screw the Leg Levelers (#2) into the bottom of each corner of the Bottom Pedestal. See **FIG. 2A**.

7. Turn over the FIG. 2A Assembly, then attach it to the Top Pedestal (#4) using eight Bolts (#32) and eight Washers (#26). See **FIG. 2B**.  
**Note: At least two adults are required to move the table for safety.**

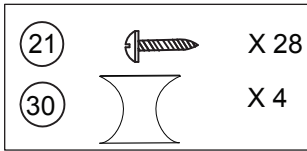


**FIG. 3**

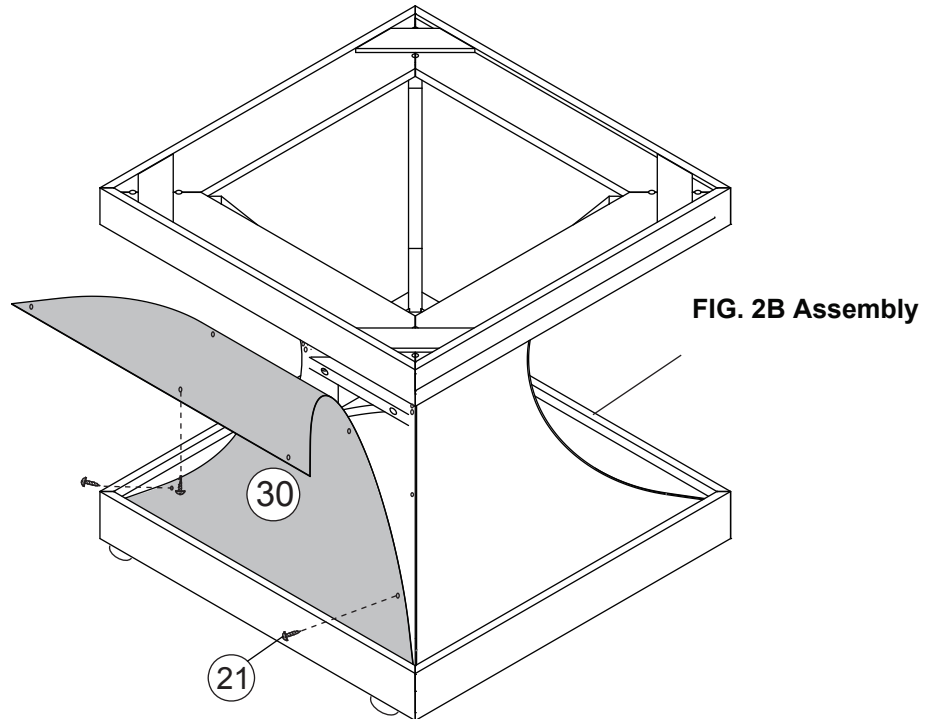


**FIG.3**

8. Attach the Leg Panels (#30) to the FIG. 2B Assembly using seven Screws (#21) per Leg Panel. **See FIG. 3.**

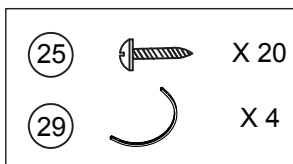


**FIG. 4**

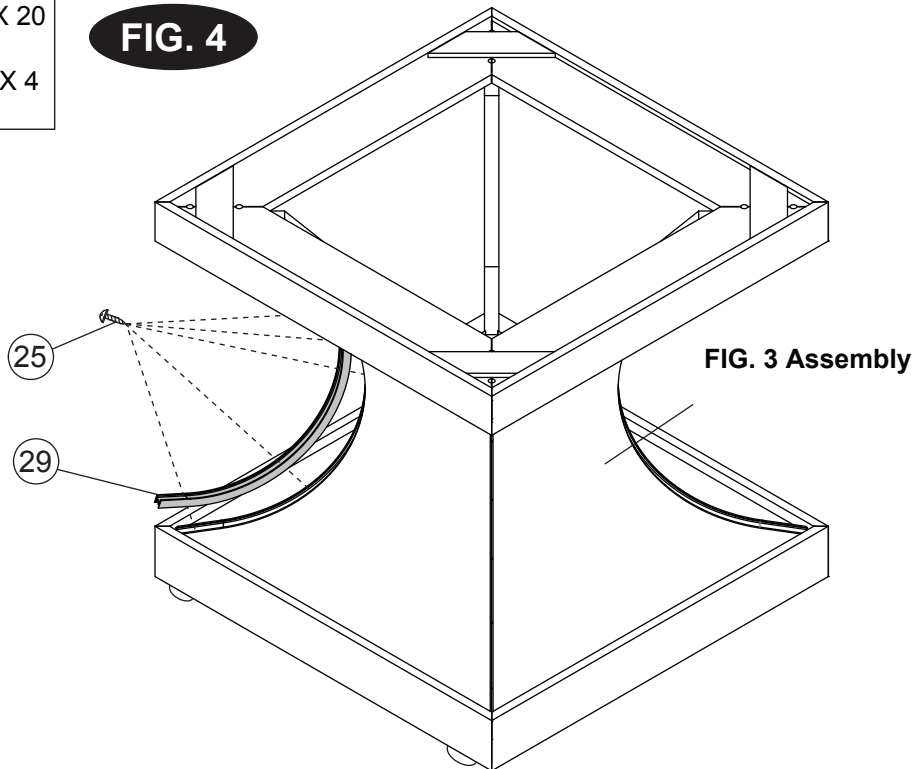



**FIG.4**

9. Attach the Alum Trim Strips - B (#29) to the FIG. 3 Assembly using five screws (#25) per Alum Trim Strip. **See FIG. 4.**




**FIG. 5**

**FIG. 5A**

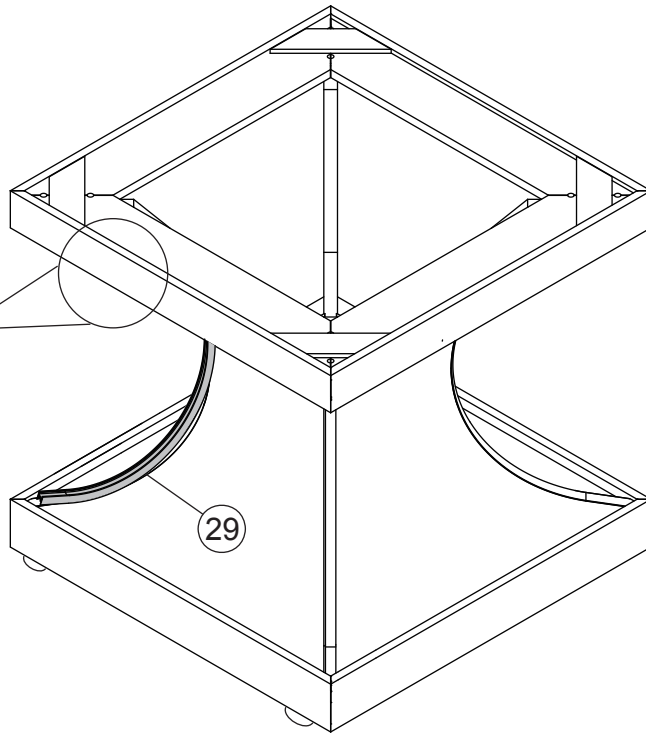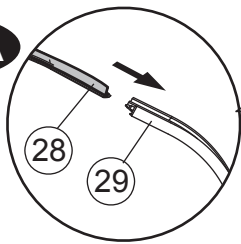


**FIG.5**

10. Insert the Trim Strips - A (#28) into the Alum Trim Strips - B (#29). See FIG. 5A.


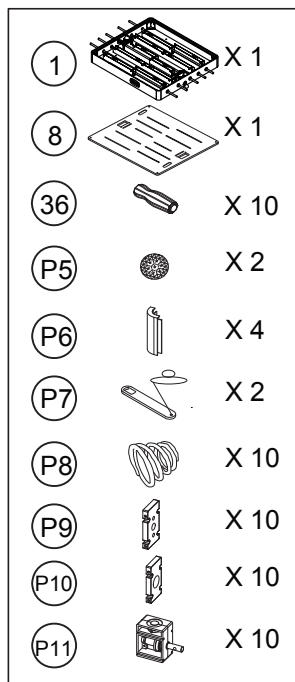


**FIG. 6**


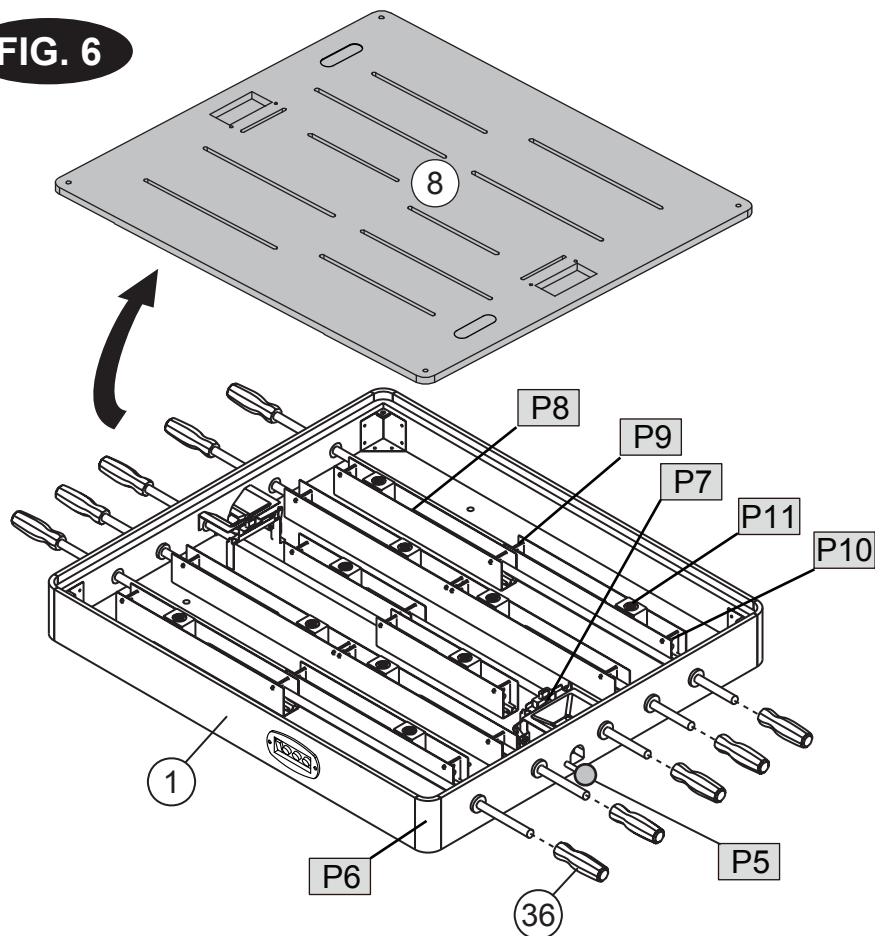


**FIG.6**

11. Remove the Playfield (#8) from the Mainframe (#1), then Place the Handles (#36) onto the ends of the Rods.

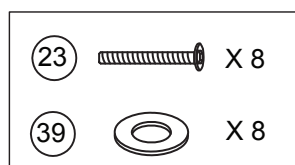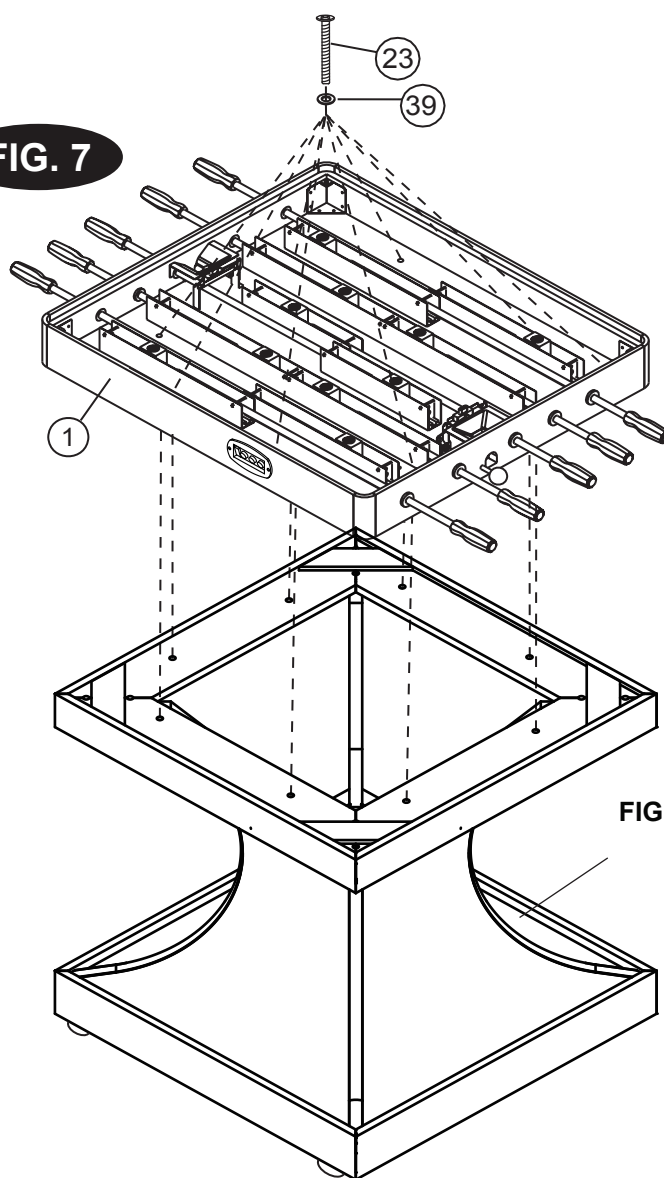**FIG. 7****FIG. 5 Assembly****FIG. 7**

12. Attach the Mainframe (#1) to the FIG. 5 Assembly using eight Bolts (#23) and eight Washers (#39). See FIG. 7.

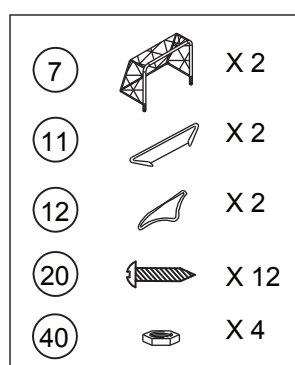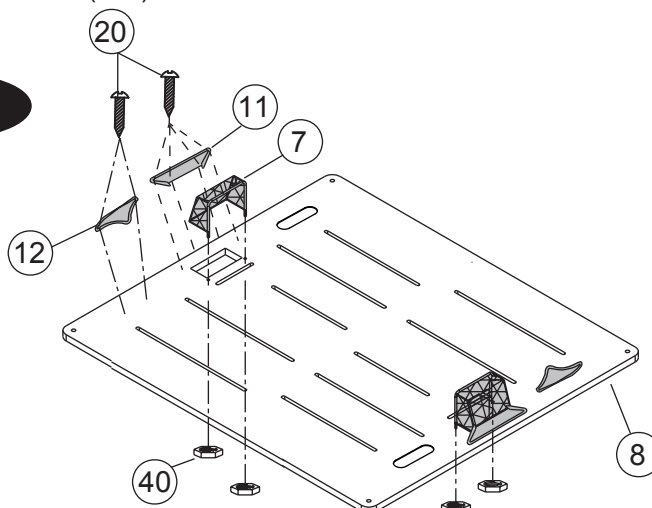**FIG. 8****FIG. 8**

13. Attach the Hockey Goals (#7) to the Playfield (#8) using two Nuts (#33) per Hockey Goal. See FIG. 8.
14. Install the Playfield Blocks (#11) and the Playfield Ends (#12) using 12 Screws (#20). See FIG. 8.









10		X 4
24		X 4
38		X 1
41		X 3
P1		X 1
P2		X 1
P3		X 1
P4		X 2

FIG. 9

FIG. 9C

FIG. 9A

FIG. 9B


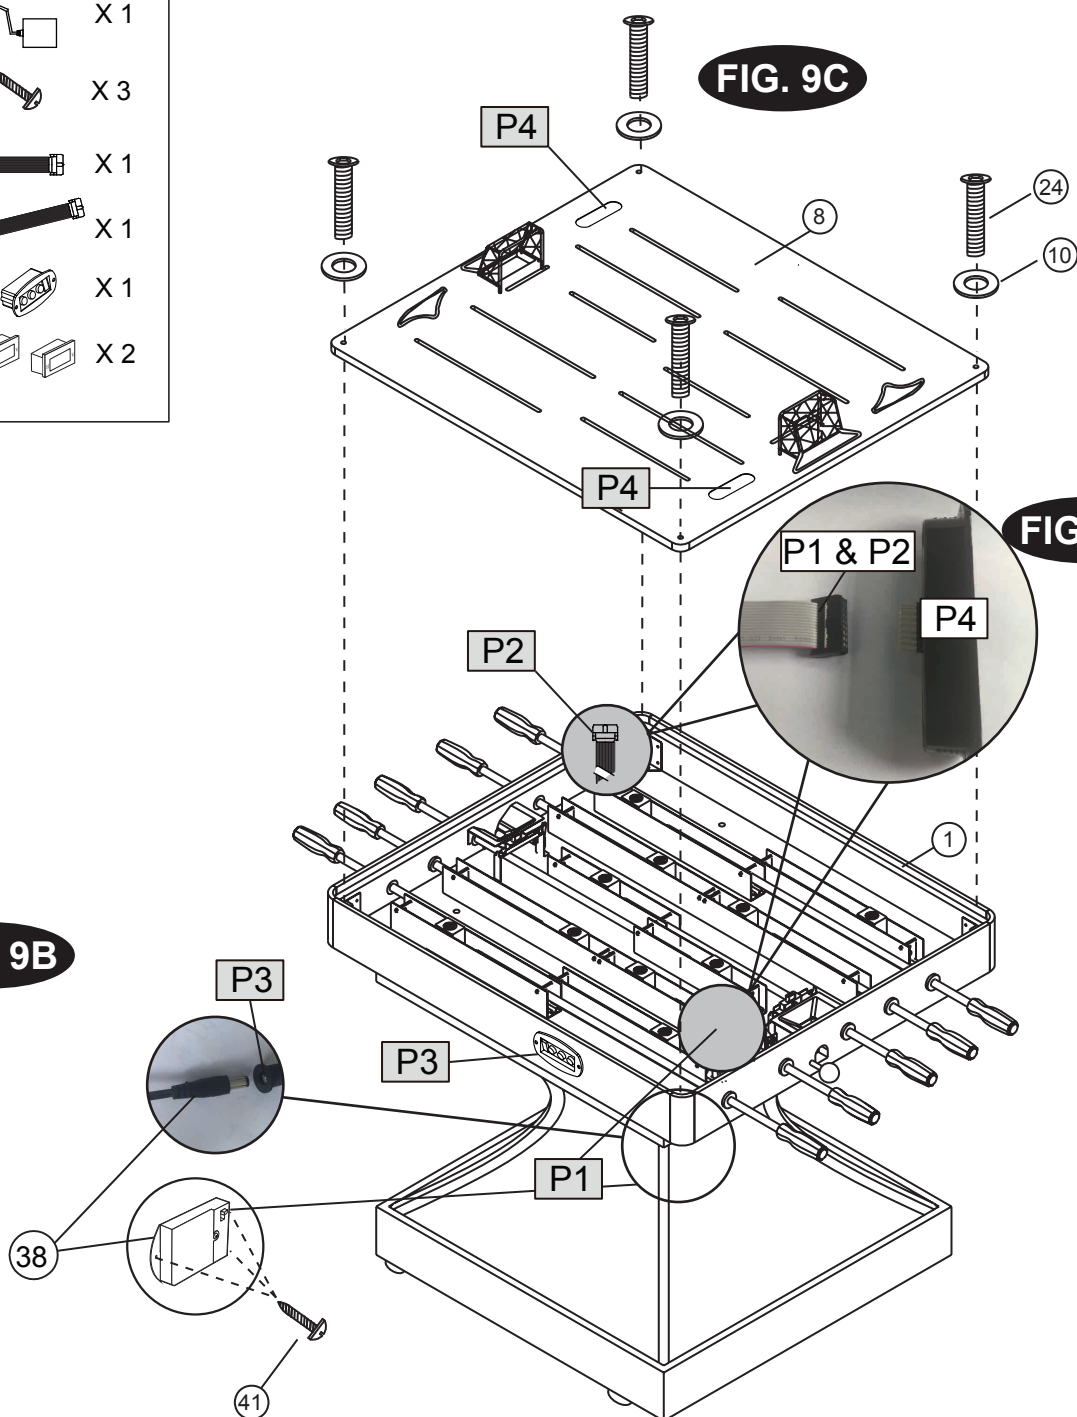



FIG.9

15. Attach the Battery box (#38) to the Mainframe (#1) using Screw (#41)  
Connect the Scorer Display Wires (#P1 & #P2) and  
Battery box (#38). **See FIG. 9A and 9B.**

16. Attach the Playfield (#8) to the Mainframe (#1) using  
four Bolts (#24) and four Washers (#10). **See FIG. 9C.**

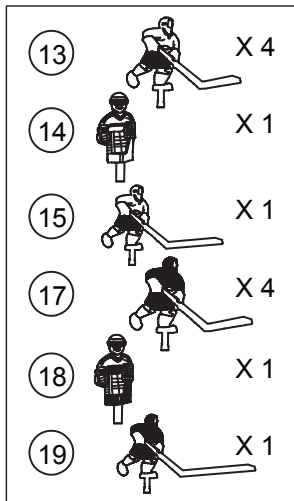


**FIG. 10**

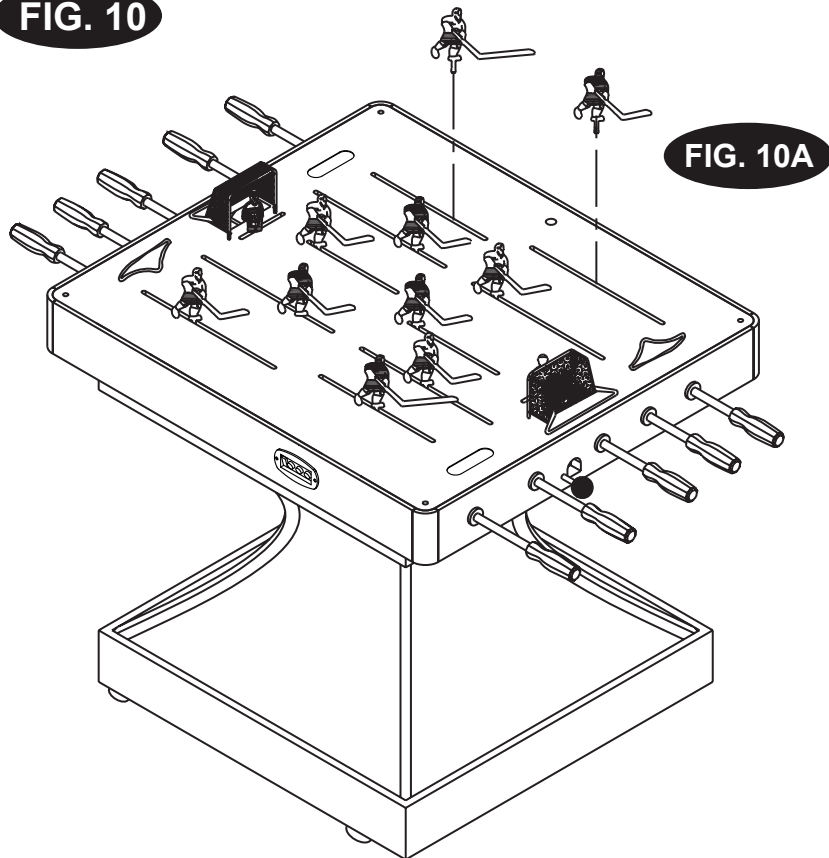

ORDER OF PLAYERS  
(Overhead View)

Orden de Jugadores  
(Vista en General)

**FIG. 10B**

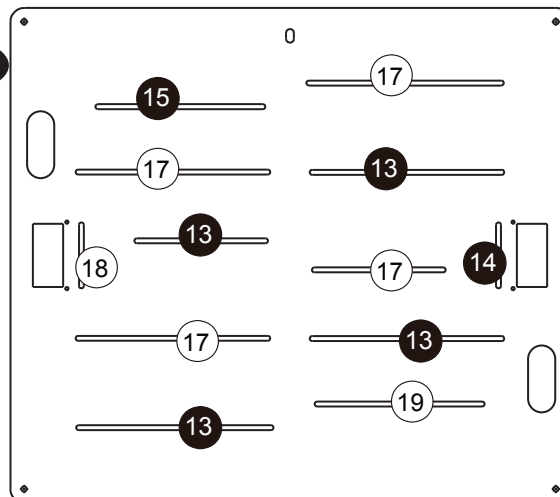



● = Yellow  
○ = Red


## FIG.10

17. Insert each Goalie (#14 and #18) and each Player (#13, #15, #17, #19) into each gear box in the order shown. **See FIG. 10A and 10B.**



6		X 1
22		X 2

**FIG. 11**

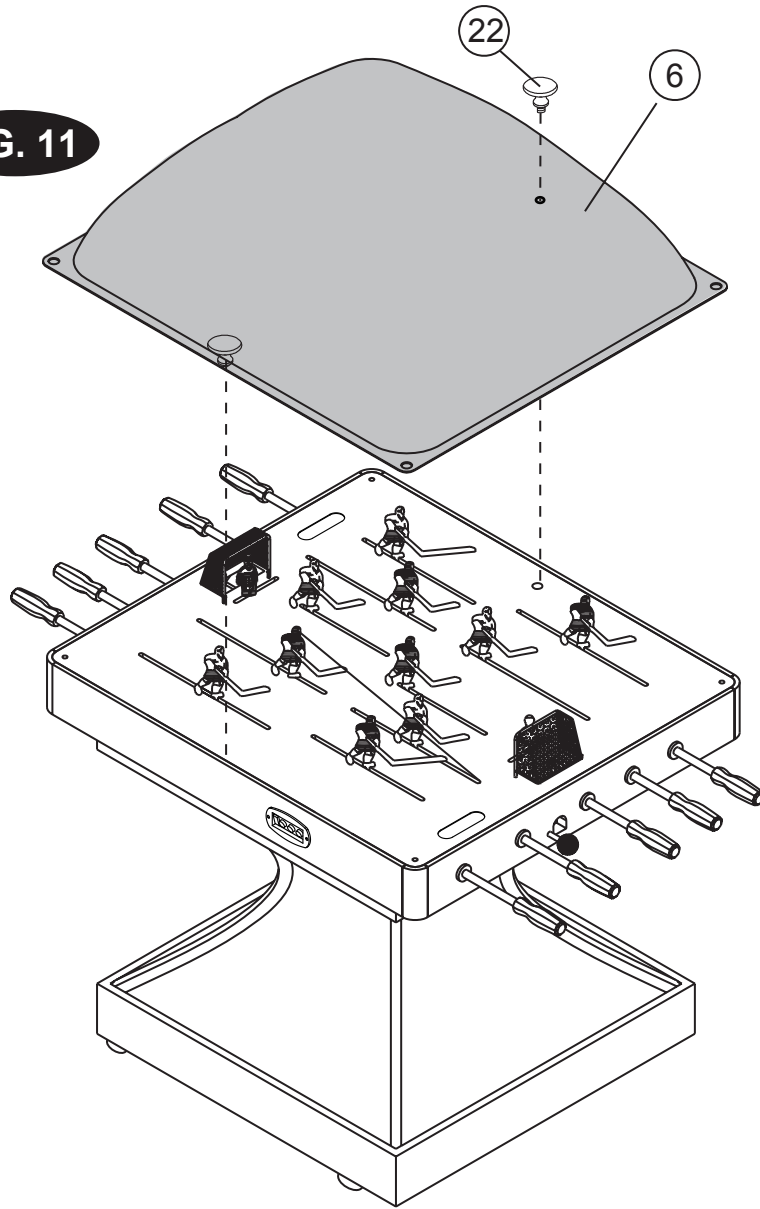

**FIG.11**  
18. Gently place the Dome (#6) onto the table using the Knobs (#22). See FIG. 11.

## Electronic Connections Diagram

